



WWW.SMITTYBILT.COM

Installation Instructions
Bolt-On Fender Flares
Dodge Ram 1500 (09-14)
Part #17491

Please read instructions entirely before installing this product.

Hardware Included	QTY
EXTRUSION	28.8ft

Hardware Included	QTY
ALCOHOL TOWELETTE	4

Bolt Kit Included	QTY
HEX BOLT	42
NUT	42
WASHER	42

Ensure that both left and right hand Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion.

***PRIOR TO ANY PAINTING & INSTALLATION, PRODUCT SHOULD BE THOROUGHLY INSPECTED FOR ALL COMPONENTS LISTED ABOVE. PRODUCT SHOULD ALSO BE TEST FITTED PRIOR TO ANY PAINTING & INSTALLATION. PLEASE CONTACT SMITTYBILT IF YOU HAVE ANY FITMENT QUESTIONS AND OR MISSING COMPONENTS.**

PAINTING INSTRUCTIONS – If Fender Flares are being painted; do not install edge extrusion until painting is complete. Prior to painting, clean all surfaces to be painted using clean water and a mild detergent, do not use lacquer thinner or any solvent based products. Wipe completely dry. Best results will be achieved by wiping the areas to be painted with a tack rag just prior to painting. Most automotive paints can be applied directly to the Fender Flares, however some may require a primer (check paint manufacturer specifications). Good adhesion will be achieved without sanding. Select a paint (and primer if necessary) that is suitable for rigid plastics PMMA (Acrylic). If using a paint system that requires baking, do not expose the product to temperatures above 70°C (158°F). Do not fit the extrusion or any of the hardware to the Fender Flares until the paint is completely dry.



STEP 1: Attach 9 bolts to each Fender Flare using a 5/32" Allen key and a 3/8" wrench/socket. (wrench/socket and Allen key not supplied)



STEP 2: Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Attach rubber seal along all areas the Fender Flare will make contact with the vehicle body.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220



WWW.SMITTYBILT.COM


Installation Instructions
Bolt-On Fender Flares
Dodge Ram 1500 (09-14)
Part #17491



STEP 3: Pulling at right angles to the extrusion, remove the liner from the extrusion in small portions and apply thumb pressure to ensure that it adheres to the Fender Flares.



STEP 4: Cut notches in extrusion tape to allow it to fit neatly around headlamp area of flare as shown.

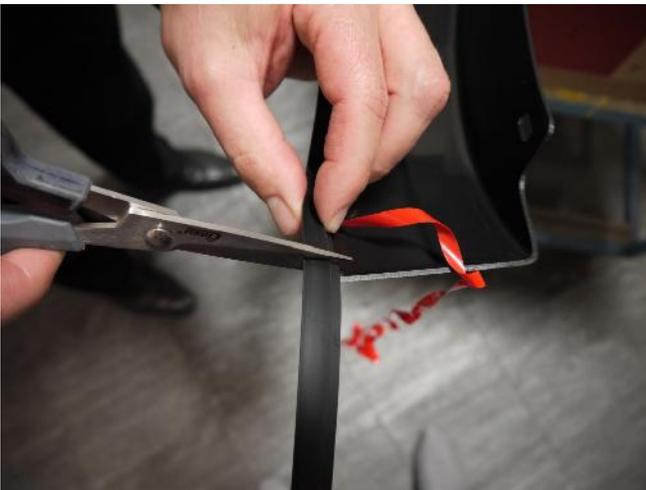

STEP 5: Trim any unnecessary extrusion and discard.



STEP 6: Clean the body areas where the Fender Flares will make contact. Use the supplied alcohol wipe.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220



WWW.SMITTYBILT.COM

Installation Instructions
Bolt-On Fender Flares
Dodge Ram 1500 (09-14)
Part #17491



STEP 7: Remove all factory bolts and retain for installation of Fender Flares.

For models equipped with factory fender flares, removal of factory flares is required, please consult the vehicle service manual for factory fender flare removal.



STEP 8: Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the body.



STEP 9: Reattach all bolts removed in step 7.



STEP 10: Check fitment and contour of Fender Flare to headlight housing and readjust if necessary.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220



WWW.SMITTYBILT.COM

Installation Instructions
Bolt-On Fender Flares
Dodge Ram 1500 (09-14)
Part #17491

REAR FENDER FLARE INSTALLATION



STEP 11: Attach 11 bolts to each Fender Flare using a 5/32" Allen key and a 3/8" wrench/socket. (wrench/socket and Allen key not supplied)



STEP 12: Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the fender flare, peeling back a few inches at a time. Attach rubber seal along all areas the Fender Flare will make contact with the vehicle body. Trim any excess rubber seal



STEP 13: Clean the body areas where the Fender Flares will make contact. Use the supplied alcohol wipe.



STEP 14: Remove all factory bolts and retain for installation of Fender Flares.

For models equipped with factory fender flares, removal of factory flares is required, please consult the vehicle service manual for factory fender flare removal. Place the Fender Flares on to the vehicle and fit into the correct position following the contours of the body.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220



WWW.SMITYBILT.COM

Installation Instructions
Bolt-On Fender Flares
Dodge Ram 1500 (09-14)
Part #17491



STEP 15: Install all bolts removed in step 14.



STEP 16: Double check the front and rear Fender Flares to make sure all bolts are tight and clips are securely fastened. Your installation is now complete. Do not use abrasive cleaners.

NOTE: If you have a EcoDiesel model you will need to carefully remove badge from the side of the fender and relocate to your desired location.



Limited Warranties

Smittybilt's products are covered under the following limited warranties only. Note that the duration of the limited warranty differs according to the material and finish of the product purchased. Subject to the duration and conditions of the limited warranty stated below, Smittybilt warrants to the original retail purchaser that its products are free from defects in material and workmanship. All other warranties and representations express or implied, are hereby disclaimed, including fitness for merchantability and buyer's intended use or purpose. All parts are sold "AS IS" except for the limited warranties granted herein. Buyer assumes all risks as to the selection, suitability and performance of all goods and products selected. This limited warranty does not cover damage or impairment in any part due to misuse, improper installation, accident or contact with on-road or off-road hazards, product modification, improper or inadequate cleaning and/or maintenance. Smittybilt is not responsible for items damaged during shipping. This warranty is not transferable from the original buyer. For the original Buyer to be eligible for the limited warranty coverage, the Buyer must provide proof of purchase. Smittybilt strongly recommends returning the warranty registration card.

Customer's remedy hereunder shall be limited only to repair or replacement (at Smittybilt's option) of any defective part(s) returned to Smittybilt at customer's expense. The determination of whether or not a returned part is defective or subject to coverage under the limited warranties stated herein shall be made at Smittybilt's sole discretion.

To assure product quality, Smittybilt reserves the right to change product design, material, specification and finishes without prior notice to customers. This limited warranty gives you specific legal rights and you may also have other rights, which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply as to you. Also, some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Smittybilt reserves the right to discontinue product lines and substitute products, or provide other remedies than those listed in this limited warranty for those discontinued products.