


ASSEMBLY INSTRUCTIONS:

Included Components:

- 1-Seat
- 1-Plastic Cover RH
- 1-Plastic Cover LH
- 1-Recliner Knob

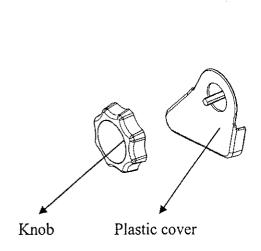

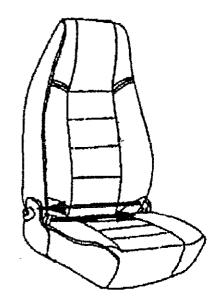

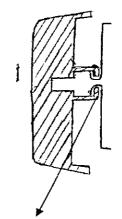

Section view for knob recliner.


Knob fully sit on the recliner

- 1. Press down (firmly) the plastic cover over the metal brackets on each rear corner.
- 2. Press on the recliner knob (on the left side for the driver side, on the right side for the passenger side)


Note: Ensure the knob recliner fully sit on the recliner (figure shown).

months on the
A
Annual franchis
0.00 A C 1 mars
And place among a strict of the strict of th
ISSUMMENT A ALAS
the wall about the s
VA HONGA MARIA
nijanaman japajap

INSTALLATION INSTRUCTIONS:

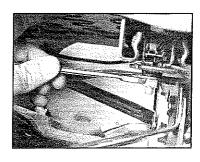


4. Remove the old seat from the riser by loosening 4 bolts. Save these bolts for later use.

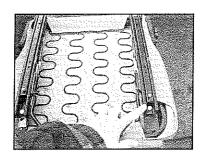


5. Remove the slider from the old seat by loosening the 4 bolts. Save these bolts for later use.

To access the rear 2 bolts push down the arm to move slider.

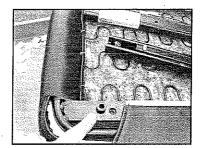

6. Place the slider mechanism on the new seat.

Use the spacers from the old seat to align the slider.

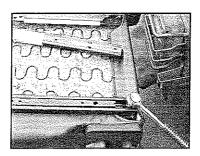

7. Fasten slider to the new seat using the 4 Bolts saved from Step 5.

8. Carefully place slider assembly back onto riser. This will be difficult. Fasten with 4 bolts saved from Step 4.

NOTE: All 1997-Current Wranglers require Adapter 49900 (driver side) or 49901 (passenger side).